

tftp update camera when camera dead.


1. Disable all the network adapters, only enable one wired adapter;



2. Set static IP 192.168.1.253 mask:255.255.255.0 gw:192.168.1.1 no dns,



3. Disable all firewall

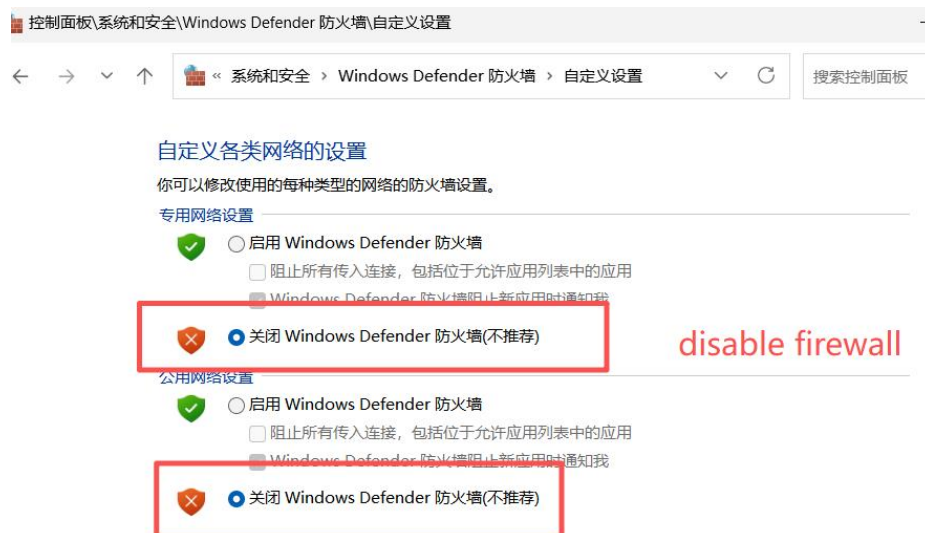

4. Run update tool AjDevTools



5. Right click the title , select “camera updating manage”

