


MSJ10 wiring diagram Wiring Diagram

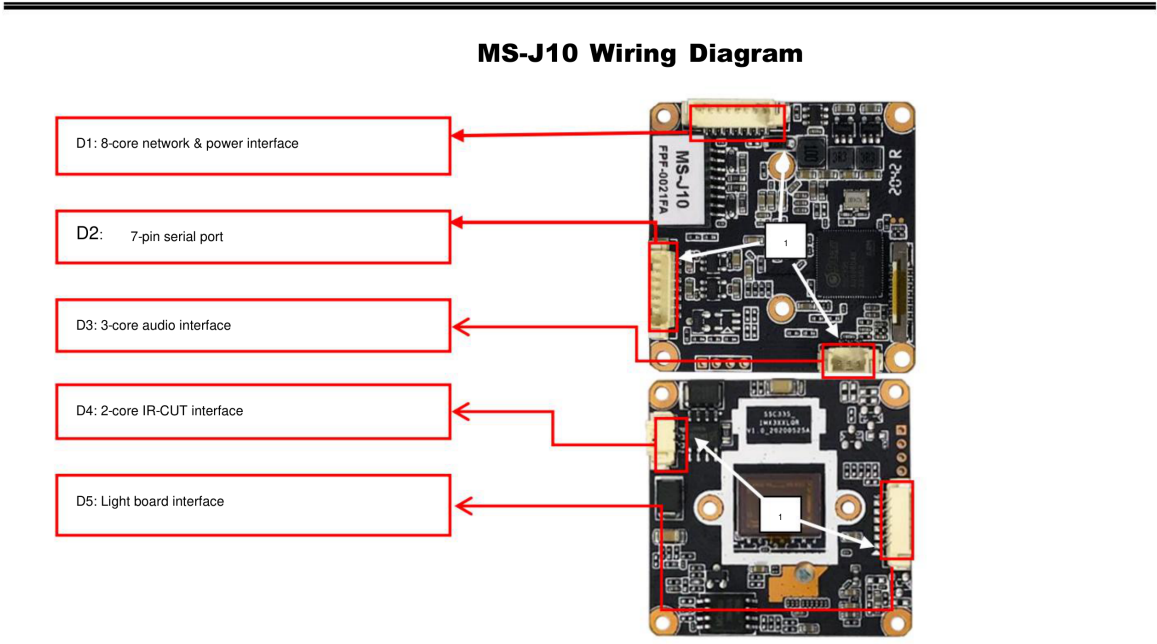

Note: The direction pointed by the white arrow is the first leg

Interface Pin Definition

Code	Interface Function	Serial Number	Pin Definition	Pin Function
		1	DC 12V+	DC 12V input
		2	GND	

Note: The direction pointed by the white arrow is the first leg

Interface Pin Definition

Code	Interface Function	No.	Pin Definition	Pin Function
		3	RJ45_6	Network receiving differential signal RJ6
		4	RJ45_3	Network receiving differential signal RJ3

Code	Interface Function	No.	Pin Definition	Pin Function
		5		Network sends differential signal RJ2
			RJ45_2	
		6	RJ45_1	Network sends differential signal RJ1
D1 8-core network & power interface		7	LED+	The network status indicator is positive.
		8	LED+	The network status indicator is positive.
		1	RESET	Reserve
		2	GND	land
		3	UART_TX	AF auto focus interface
		4	UART_RX	NC
		5	UART1_TX	Reserve
D2	4-core serial port interface	6	UART1_RX	Reserve
		7	I_IN	IO amplifier control
		1	AUDIO_OUT	External speakers
D3	3-pin audio interface	2	AUDIO_IN	External active pickup
		3	GND	land
		1	IR-CUT control signal	Output
		2		
			IR-CUT control signal	Output
D4		1	CDS_I N	Photosensitive control signal input
		2	GND	land
		3	DC 12V_OUT	DC12V output

Code	Interface Function	No.	Pin Definition	Pin Function
		4	GND	
D5	Light board interface			land
		5	I_IN	Soft photosensitivity infrared
		6	IO_OUT	Soft photosensitivity warm light