


MC-L18D wiring diagram Wiring Diagram

MC-L18D wiring diagram Wiring Diagram

MC-L18D wiring diagram Wiring Diagram

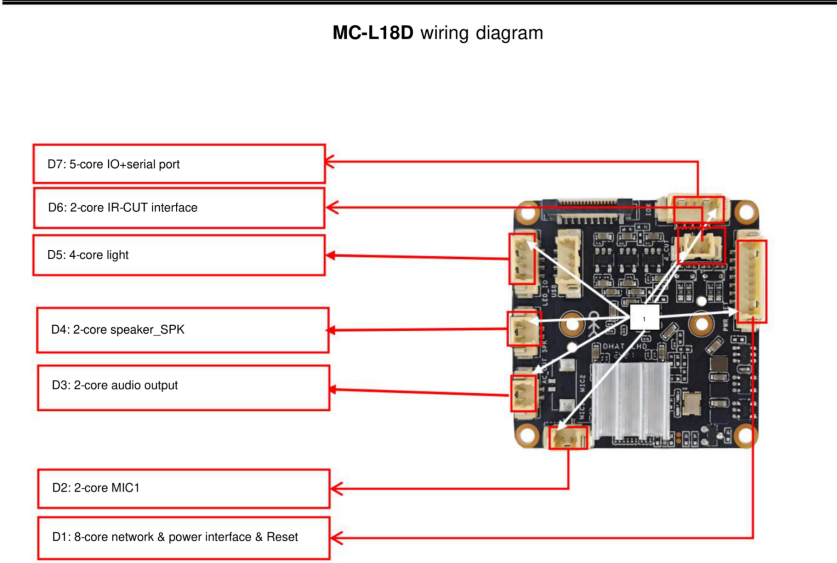

Note: The direction pointed by the white arrow is the first leg

Interface Pin Definition			
Code	Interface	Function	Pin Definition

Note: The direction pointed by the white arrow is the first leg

Note: The direction pointed by the white arrow is the first leg

Note: The direction pointed by the white arrow is the first leg

Interface Pin Definition

Code	Interface Function	No.	Pin Definition	Pin Function
	Interface	No.		
	Function			
	Interface	No.		
	Function			
			DC 12V+	DC 12V input
			GND	land
			RJ45_6	Network receiving differential
				signal RJ6
	Interface	No.		

Code	Interface Function	No.	Pin Definition	Pin Function
	Function			
			RJ45_3	Network receiving differential
	Interface	No.		
	Function			
				signal RJ3
			RJ45_2	Network sends differential signal
				RJ2
D1 8-core				
			RJ45_1	Network sends differential signal
network &				RJ1
			Reset	Reset
			LED+	The network status indicator is
power interface				positive .
			MIC+	
D2	2-core main MIC		MIC-	Microphone
			AUDIO_OUT	Audio Output
			GND	land
D3	Audio Output		SPK-	
			SPK+	Speaker output_2W
			CDSIN	Hard photosensitivity
D4			GND	land
			PWM1	Infrared
			PWN0	Warm light/white light

Code	Interface Function	No.	Pin Definition	Pin Function
			IR-CUT control signal	Output
D5	Lighting Control		2	Output
			IR-CUT control signal	
			GND	land
			TX	
			RX	Serial Port
D6		No.		
			I-OUT	SPKEN
D7	IO+Serial Port		I-OUT	Red and blue light IO